



Originalfernbedienung Ersatzfernbedienung















 


 


 

| | | | |
|---|----------|---|--------|
|  | Power |  | Power |
|  | Info |  | Info |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 / Zoom |  | 0 |
|  | 0 / Zoom |  | Eject |
|  | Audio |  | Dual |
|  | Mute |  | Mute |
|  | Recall |  | Back |
|  | FAV |  | Pre Ch |

Originalfernbedienung Ersatzfernbedienung






 







 









 

 

 
 

 
| | | | |
|---|-------------------|---|--------|
|  | Up / CH+ |  | Up |
|  | Up / CH+ |  | Ch + |
|  | Down / CH- |  | Down |
|  | Down / CH- |  | Ch - |
|  | Right / Vol+ |  | Right |
|  | Right / Vol+ |  | Vol + |
|  | Left / Vol- |  | Left |
|  | Left / Vol- |  | Vol - |
|  | OK |  | Ok |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | Blue / Pause |  | Blue |
|  | Blue / Pause |  | Pause |
|  | Red / Text |  | Red |
|  | Red / Text |  | Text |
|  | Multivideo |  | Smart |
|  | Yellow / Subtitle |  | Yellow |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|--|------------|
|  | Power |  | Power |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | TV/SAT |  | AV |
|  | TV/Radio |  | TV/R |
|  | Zoom |  | Eject |
|  | List |  | List |
|  | Audio |  | Dual |
|  | EPG |  | Guide |
|  | Timer |  | Shift + AV |
|  | Text |  | Text |
|  | Exit |  | Exit |
|  | Menu |  | Menu |
|  | M/P |  | Media |
|  | Mute |  | Mute |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|----------------|
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | P+ |  | >> |
|  | P- |  | << |
|  | Recall |  | Pre Ch |
|  | FAV |  | Shift + Pre Ch |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |



