




 
 
 
 
 


 
 


 
 



 


 

 
 





 
 
 
 

 
 
 


 






**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Open/Close		Eject
	Subtitle		Subt
	Audio		Dual
	Angle		Guide
	PS/IS		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		List

**Originalfernbedienung Ersatzfernbedienung**

	Mute		Mute
	Setup		Options
	Title		3D
	Source		AV
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Rec/OTR		Rec
	Disc OP		Media
	Timer		Shift + AV




**Originalfernbedienung   Ersatzfernbedienung**

	Play		Play
	Pause/Step		Pause
	Stop		Stop
	Return		Back
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	DVD		Red
	TV		Green
	DV		Yellow
	USB		Blue
	Edit	+	Shift + Options
	Finalize		D. Menu
	Erase	+	Shift + Subt
	Quality	+	Shift + TV/R
	ADD/Clear		Exit

**Originalfernbedienung   Ersatzfernbedienung**

	Random		Format
	Zoom	+	Shift + Eject
	A-B		Pre Ch
	Repeat		Text
	Display		Info
	Program		Sleep
	Scan		Smart

