


 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Open / Close		Eject / Surround
	OSD		Display / Media
	1		1
	2		2
	3		3
	Subtitle		Subtitle / EQ
	4		4
	5		5
	6		6
	Angle		Info / Angle
	7		7
	8		8
	9		9
	Language		Audio / Lang I/II
	R/L		Blue / Prime Video / Random
	0		0










 

 













 





**Originalfernbedienung    Ersatzfernbedienung**

	10+		Guide / EPG / -/--
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Clear		Exit / Cancel / Clear
	Prog		TV/Radio /
	Time		Sleep / Timer
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Title		Sound / Title
	Menu		Menu / Home
	Default		AV / Input / RDS
	<<		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	I<<		I<< / Preset-
	>>		>> / Tune+
	Stop		Stop / Hold
	>>I		>>I / Preset+
	N/F		Red / Netflix / Search
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	zoom		Zoom / Size
	Mode		D.Menu / Top
	Step		Shift + Pause / Step /
	Slow		Shift + Play /
	Vol+		Vol+
	Resume		Smart / List
	PBC		Picture / Format
	Return		Back / Return
	Vol-		Vol-


















Originalfernbedienung Ersatzfernbedienung





















Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Title		Sound / Title
Audio		Audio / Lang I/II
Subt.		Subtitle / EQ
Open/Close		Eject / Surround
Auto/Track		Picture / Format
Zoom		Zoom / Size
Np		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

Progr.		TV/Radio /
Top Menu		D.Menu / Top
Setup		Setup / OPT /
C/CH		Text / Goto
DVD/TV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Angle		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Pbc		Exit / Cancel / Clear
Menu Down		Down
Return		Back / Return
Volume+		Vol+
Resume		Smart / List
Slow Up		CH+ / Page+





**Originalfernbedienung Ersatzfernbedienung**

Volume-	VOL —	Vol-
Display	MEDIA DISPLAY	Display / Media
Slow Down	CH PAGE —	CH- / Page-
1	TV 1	1
2	DVD 2	2
3	CD - STB 3	3
4	VIDEO 4	4
5	TAPE 5	5
6	TUNER 6	6
7	AUX - HDD 7	7
8	USB 8	8
9	BLUETOOTH 9	9
+10	GUIDE EPG	Guide / EPG / -/--
0	HDMI - BAT 0	0
R/L	PC FAV MARKER	Fav / Marker / PC
Search	NETFLIX SEARCH	Red / Netflix / Search
Repeat/1/All	APP REPEAT	Green / APP / Repeat

**Originalfernbedienung Ersatzfernbedienung**


















Rep/A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Shuffle	Prime Video RANDOM	Blue / Prime Video / Random
Karaoke/Step	SHIFT + STEP-FREEZE	Shift + Pause / Step /
Echo+	SHIFT + [UP]	Shift + Up
Echo-	SHIFT + [DOWN]	Shift + Down
3D	SHIFT + CD - STB 3	Shift + 3
Video	SHIFT + VIDEO 4	Shift + 4






















**Originalfernbedienung    Ersatzfernbedienung**

On/Off		Power
Audio Off		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Title		Sound / Title
Lang		Audio / Lang I/II
Subt.		Subtitle / EQ
Open/Close		Eject / Surround
Auto/Track		Picture / Format
Zoom		Zoom / Size
Pbc		Sleep / Timer


















**Originalfernbedienung    Ersatzfernbedienung**

Progr.		TV/Radio /
Top Menu		D.Menu / Top
Setup		Setup / OPT /
Resume		Text / Goto
DVD/TV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Angle		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Clear/00:00		Exit / Cancel / Clear
Menu Down		Down
Return		Back / Return
Volume+		Vol+
Mode		Smart / List
Slow Up		CH+ / Page+







**Originalfernbedienung    Ersatzfernbedienung**

Volume-		Vol-
Display		Display / Media
Slow Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
+10		Guide / EPG / -/--
0		0
C/CH		Fav / Marker / PC
Np		Red / Netflix / Search
Repeat/1/All		Green / APP / Repeat

**Originalfernbedienung    Ersatzfernbedienung**

Rep/A-B		Yellow / YouTube / Repeat
R/L		Blue / Prime Video / Random

