





 

 
 

 
 
 
 

 


 

 
 


 
 
 

 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	USB/My Media		Media
	Input		AV
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Mark		Guide
	Key's Up		>>
	Key's Down		<<
	Sleep		Sleep
	Picture		Format
	3D		3D
	L/R		TV/R
	Ratio		List
	Blank		Text

**Originalfernbedienung    Ersatzfernbedienung**

	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Page Up		Ch +
	Page Down		Ch -
	Settings		Options
	Still		Smart
	Q.Menu		D. Menu
	Back		Back
	Auto		Pre Ch
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red



