



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV / Input / RDS
	TV / TXT		Shift + Text /
	Cancel		Shift + Exit / Cancel / Clear
	Reveal		Setup / OPT /
	Nicam/A2		Shift + Sound / Title
	Hold		Stop / Hold
	Size		Shift + Zoom /
	Subpage		Eject / Surround
	Index		Smart / List
	Red / TV/Radio		Red / Netflix / Search
	Red / TV/Radio		TV/Radio /
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	CH+		CH+ / Page+
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	CH-		CH- / Page-
	Vol-		Vol-
	Menu		Menu / Home
	Mute		Mute / Dimmer
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	DVB		D.Menu / Top
	Exit		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	-/--	+	Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	Picture		Picture / Format
	Sound		Sound / Title
	Sleep		Sleep / Timer
	Subtitle		Subtitle / EQ
	Language		Audio / Lang I/II
	Display / Info		Display / Media
	Zoom		Zoom / Size
	Text		Text / Goto
	EPG		Guide / EPG / -/--
	FAV		Fav / Marker / PC
	FAV+	+	Shift + CH+ /

Originalfernbedienung Ersatzfernbedienung

	FAV-	+	Shift + CH- /
--	------	---	---------------

