
 




 
 
 
 

 

 
 
 
 




 

 
 
 
 




 
 
 






**Originalfernbedienung Ersatzfernbedienung**

On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Stop		Stop
Slow Up		Ch +
Auto/Track		Red
Pause		Pause
Subt.		Subt
Rep/A-B	 + 	Shift + Text
Title		List
Repeat/1/All		Text
Zoom	 + 	Shift + Eject
DVD/TV		Media
Menu		Menu
Menu Up		Up
Display		Info
Return		Back

**Originalfernbedienung Ersatzfernbedienung**


 


 

Menu Left		Left
Next		>>
Progr.		Sleep
Prev.		<<
OK Enter		Ok
Top Menu	 + 	Shift + Menu
Menu Right		Right
Menu Down		Down
Volume+		Vol +
Volume-		Vol -
1		1
2		2
3		3
4		4
Mark	 + 	Shift + Pre Ch
Digest	 + 	Shift + Info
Rewind		<<



**Originalfernbedienung Ersatzfernbedienung**

Play		Play
Record		Rec
F.Forward		>>
R/L		Green
Pbc		Yellow
5		5
6		6
7		7
8		8
Video		Smart
9		9
Syst.Preset		D. Menu
+10		Guide
Angle		Format
0		0
C/CH		Pre Ch
Open/Close		Eject

**Originalfernbedienung Ersatzfernbedienung**

Np	 + 	Shift + Subt
Input Source		AV
Setup		Options
Audio		Dual
3D		3D

