 











 
 
 

 

 





 

 

 

 



 

 

 

 









 



 

 



 



 







Originalfernbedienung Ersatzfernbedienung

	Open / Close		Eject / Surround
	FL Dimmer		Mute / Dimmer
	On / Standby		Power
	Setup		Setup / OPT /
	Display		Display / Media
	Zoom		Zoom / Size
	3D		Shift + 3
	Angle		Info / Angle
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	+10		Guide / EPG / -/-
	T / Search		Red / Netflix / Search
	Top Menu		D.Menu / Top
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Clear		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	REV		<< / Tune-
	Play		Play / Slow
	FWD		>> / Tune+





Originalfernbedienung Ersatzfernbedienung

	Pause / Step		Pause / Step / Freeze
	I<< Skip		I<< / Preset-
	Stop		Stop / Hold
	Skip >>I		>>I / Preset+
	Slow		Shift + Play /
	Random		Blue / Prime Video / Random
	Memory		Smart / List
	Repeat		Green / APP / Repeat
	A-B RPT		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

