



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Stop/A/B/C/D/E		Stop
	<</Preset		<<
	>>/Preset Up		>>
	>>I/PTY SEEK		>>I
	I<</Freq/RDS		I<<
	Play/PTY SEEK		Play

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Sleep		Sleep
	On screen		Info
	Menu		Menu
	Set Menu		D. Menu
	VCR		Green
	Video		Yellow
	DVD/CD		Blue
	Tuner		Red
	Status		Media
	Return		Back
	Test		Guide
	Mute		Mute
	Up		Up
	Enter		Ok
	Down		Down
	Right/CH+		Right



