









 



 





 
















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	<<		I<< / Preset-
	>>		>>I / Preset+
	:Q		Sound / Title
	TV Play		Eject / Surround
	Format		Picture / Format
	Live TV		TV/Radio /
	≡		D.Menu / Top
	⚙		Setup / OPT /
	Green / TTX		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Home		Menu / Home
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Del		Exit / Cancel / Clear
	Blue / Info		Info / Angle
	Back		Back / Return
	Vol+		Vol+
	Vol-		Vol-
	Internet		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Mouse		Display / Media
	1		1





Originalfernbedienung Ersatzfernbedienung

2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - BAT 0	0
Red / EPG	Red / EPG	GUIDE EPG	Guide / EPG / -/--
Left Arrow	Left Arrow	PC FAV MARKER	Fav / Marker / PC
Red / EPG	Red / EPG	NETFLIX SEARCH	Red / Netflix / Search
Green / TTX	Green / TTX	APP REPEAT	Green / APP / Repeat
Yellow / FAV	Yellow / FAV	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue / Info	Blue / Info	Prime Video RANDOM	Blue / Prime Video / Random
Yellow / FAV	Yellow / FAV	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung