
 


 
















 




 
 

 


 



 
 

 

 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Smart	
Txt Stop		Stop	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Menu video		Format	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Menu audio		Dual	
Volume-		Vol -	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
Guide -/-- 1.		Guide	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
0/10			0
2.Fav P/C 2.			Pre Ch
Red			Red
Green			Green
Yellow			Yellow
Aft/Caf			Options
Blue			Blue
Mix Scan			D. Menu

