



**Originalfernbedienung Ersatzfernbedienung**

	POWER ON	 + 	Shift + Power
	POWER		Power
	POWER OFF	 + 	Shift + Source
	ZOOM UP		+ / Play
	ZOOM DOWN		- / Stop
	FOCUS UP	 + 	Shift + Vol + / Page +
	FOCUS UP 2	 + 	Shift + Right
	FOCUS DOWN	 + 	Shift + Vol - / Page -
	FOCUS DOWN 2	 + 	Shift + Left
	VOL +		Vol + / Page +
	VOL -		Vol - / Page -
	MUTE		Blank / Mute
	MENU		Menu
	INPUT 1		Comp / Video
	INPUT 2	 + 	Shift + Comp / Video
	INPUT 3		Mode
	INPUT NEXT		Source

**Originalfernbedienung Ersatzfernbedienung**

	UP		Up
	LEFT		Left
	OK		Enter
	RIGHT		Right
	DOWN		Down
	LENS SHIFT		Eco / Aspect
	NO SHOW		3D / Invert
	AUTO PC ADJ.		Auto
	KEYSTONE UP	 + 	Shift + Up
	KEYSTONE	 + 	Shift + Down
	FREEZE		Freeze / Timer
	Image		Volt / Focus

