




**Originalfernbedienung    Ersatzfernbedienung**


 


 
 
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / □		0
	Exit / TV/Radio		Exit
	Exit / TV/Radio		TV/R
	Mute		Mute
	Vol-		Vol -
	Vol+		Vol +
	i		Info

**Originalfernbedienung    Ersatzfernbedienung**

	Back		Back
	Text		Text
	Menu		Menu
	Guide		Guide
	P+		Ch +
	P-		Ch -
	↑		Shift + Ch +
	↓		Shift + Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Red		Red
	Green / Option		Green
	Green / Option		Options
	Yellow / Freeze		Yellow





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Yellow / Freeze	 Pause		
 Blue / Recall	 Blue		
 Blue / Recall	 Pre Ch		

