




 




 
 





 
















 

 


 

 


 

 

 


 

 

 
 
 

 












**Originalfernbedienung    Ersatzfernbedienung**

	Power DVD		Power
	Direct Tv Rec		TV/R
	Drive Select HDD		Media
	Drive Select DVD		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	* Cancel		Guide
	Input Select		AV
	CH+		Ch +

**Originalfernbedienung    Ersatzfernbedienung**

	CH-		Ch -
	ShowView		Blue
	Manual Skip		Subt
	⏮ Skip		⏮
	Skip ⏭		⏭
	◀ Slow/Search		◀
	Slow/Search ▶		▶
	■ Stop		■ Stop
	⏸ Pause		⏸ Pause
	▶ Play/x1.3		▶ Play
	Direct Navigator/Top		Menu
	Functions		Options
	Sub Menu		D. Menu
	Return		Back
	Up		Up
	Down		Down
	Right / ⏭		Right



