


 










 


 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	Display		Info
	Source		AV
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Exit		Exit
	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	S.Mode		Shift + Dual
	CH+		Ch +
	CH-		Ch -
	Audio I/II		Dual
	P.Mode		Shift + Format
	Auto		Smart
	Sleep		Sleep
	Aspect		Format
	Red / Eject		Red

 

 






 

 






 


 
 
 




**Originalfernbedienung    Ersatzfernbedienung**

 Red / Eject	 Eject
 Green / D.Menu	 Green
 Green / D.Menu	 D. Menu
 Yellow / Setup	 Yellow
 Yellow / Setup	 Options
 Blue / D.Disp	 Blue
 Blue / D.Disp	 List
 Play/Pause / Text	 Text
 Play/Pause / Text	 Play
 Play/Pause / Text	 Pause
 Stop / Index	 Stop
 A-B / MIX	 Shift + TV/R
 Repeat / Reveal	 Shift + Text
 << / Hold	 Shift + Stop
 << / Hold	 <<
 >> / Subpage	 >>
 >> / Subpage	 Shift + Subt

**Originalfernbedienung    Ersatzfernbedienung**

 I<< / Size	 I<<
 I<< / Size	 Shift + Eject
 >>I / Cancel	 >>I
 >>I / Cancel	 Shift + Exit
 Time Shift	 Media
 Rec	 Rec
 FAV-	 Shift + Left
 FAV+	 Shift + Right
 EPG	 Guide
 FAV	 Pre Ch
 Subtitle	 Subt
 TV / Radio	 TV/R

