

 



































Originalfernbedienung    Ersatzfernbedienung

	TV / RAD		TV/Radio /
	Power		Power
	Mute		Mute / Dimmer
	F1		Shift + Red / Netflix /
	F2		Shift + Green / APP /
	F3		Shift + Yellow / YouTube /
	F4		Shift + Blue / Prime
	F.List		Smart / List
	G.List		Display / Media
	FAV		Fav / Marker / PC
	Aspect		Picture / Format
	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>I		>>I / Preset+
	Timer		Sleep / Timer
	Stop		Stop / Hold

Originalfernbedienung    Ersatzfernbedienung

	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Vol+		Vol+
	Guide		Guide / EPG / -/-
	CH+		CH+ / Page+
	Vol-		Vol-
	Exit		Exit / Cancel / Clear
	CH-		CH- / Page-
	Info		Info / Angle
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Audio		Audio / Lang I/II
	Down		Down



