


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Muting		Mute / Dimmer
	Pause/Enter/Shift		Pause / Step / Freeze
	6.1/7.1 Surround		Sound / Title
	Stereo		Audio / Lang I/II
	Output		Eject / Surround
	DSP Simu.		Zoom / Size
	Tv/VCR		TV/Radio /
	Direct		D.Menu / Top
	Setup		Setup / OPT /
	Test Tone		Text / Goto
	Input Mode		AV / Input / RDS
	OSD/Menu		Menu / Home
	Up		Up
	Left		Left
	Right		Right
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Volume+		Vol+
	Volume-		Vol-
	Surr.Parra./Displa		Display / Media
	1/Tuner		1
	2/Phono		2
	3/CD		3
	4/CDR/Tape		4
	5/VDP		5
	6/DVD		6
	7/VCR-1		7
	8/VCR-2/V-AUX		8
	9/Tv/DBS		9
	+10		Guide / EPG / -/-
	0		0
	Off		Shift + Power
	Speaker		Shift + Sound / Title
	Dolby/DTS		Shift + Audio / Lang I/II



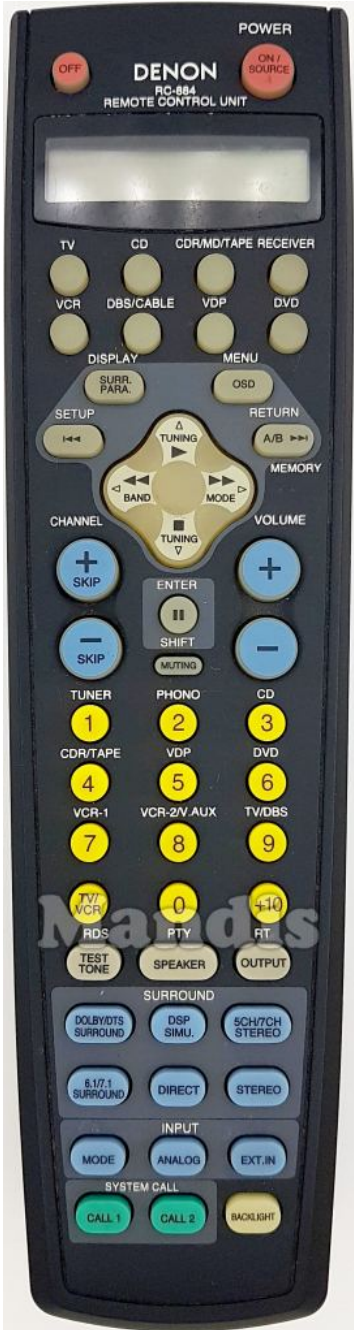

Originalfernbedienung Ersatzfernbedienung

	Input Ext. In		+		Shift + TV/Radio / Program
	Input Analog		+		Shift + AV / Input / RDS
	5CH/7CH Stereo		+		Shift + 5

Originalfernbedienung Ersatzfernbedienung