


Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mute		Mute
	TV / Radio		TV/R
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Exit		Exit
	Rec		Rec
	Red / ■		Red
	Green / ▶/		Green
	Yellow / ▶▶		Yellow
	Blue / Timeshift		Blue
	Audio		Dual
	Red / ■		Stop
	Green / ▶/		Play
	Green / ▶/		Pause
	Yellow / ▶▶		Shift + Play
	◀◀		<<





Originalfernbedienung Ersatzfernbedienung

			
	Menu		Menu
	Text		Text
	EPG		Guide
	Info		Info
	Sub-T		Subt

Originalfernbedienung Ersatzfernbedienung

