 



 

 

 

 

 



 
 
 
 
 
 
 

 





 





 
 
 

 

 

 

 
 

 



 
 
 
 
 

 


 



 




**Originalfernbedienung Ersatzfernbedienung**

	Power TV		Power
	1 TV		1
	2 TV		2
	3 TV		3
	4 TV		4
	5 TV		5
	6 TV		6
	7 TV		7
	8 TV		8
	9 TV		9
	0/-- TV		0
	AV TV		AV
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return TV		Back
	PR+ TV		Ch +

**Originalfernbedienung Ersatzfernbedienung**

	PR- TV		Ch -
	Play TV		Play
	<< TV		<<
	>> TV		>>
	Record TV		Rec
	Stop TV		Stop
	Pause TV		Pause
	Exit TV		Exit
	Menu TV		Menu
	Violet/Text TV		Text
	Red/Presets TV		Red
	Green/List TV		Green
	Yellow/Info TV		Yellow
	Blue/Guide TV		Blue
	Up TV		Up
	Down TV		Down
	Right/Zoom+		Right

 

 


 













 



 
 






**Originalfernbedienung    Ersatzfernbedienung**

	Left/Zoom- TV		Left
	OK TV		Ok
	TV		TV/R
	Demo TV		Pre Ch
	VCR		Smart
	SAT		Media
	DVD		Options
	AUX		Format
	AMP		3D
	Power AUX		Shift + Power
	Red/Presets		Shift + Red
	Green/List AUX		Shift + Green
	Yellow/Info AUX		Shift + Yellow
	Blue/Guide AUX		Shift + Blue
	Up AUX		Shift + Up
	OK AUX		Shift + Ok
	Down AUX		Shift + Down

**Originalfernbedienung    Ersatzfernbedienung**

 

 
 
 



 

 
 
 
 
 
 
 

 

 


 









 
	Right/Zoom+		Shift + Right
	Left/Zoom- AUX		Shift + Left
	Exit AUX		Shift + Exit
	Menu AUX		Shift + Menu
	Violet/Text AUX		Shift + Text
	Return AUX		Shift + Back
	PR+ AUX		Shift + Ch +
	PR- AUX		Shift + Ch -
	1 AUX		Shift + 1
	2 AUX		Shift + 2
	3 AUX		Shift + 3
	4 AUX		Shift + 4
	5 AUX		Shift + 5
	6 AUX		Shift + 6
	7 AUX		Shift + 7
	8 AUX		Shift + 8
	9 AUX		Shift + 9








**Originalfernbedienung    Ersatzfernbedienung**

 
	Power DVD		Power
	Red/Presets		Red
	Green/List DVD		Green
	Yellow/Info DVD		Yellow
	Blue/Guide DVD		Blue
	Violet/Text DVD		Text
	Up DVD		Up
	Down DVD		Down
	Right/Zoom+ DVD		Right
	Left/Zoom- DVD		Left
	OK DVD		Ok
	Exit DVD		Exit
	Menu DVD		Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return DVD		Back

**Originalfernbedienung    Ersatzfernbedienung**

	PR+ DVD		Ch +
	PR- DVD		Ch -
	1 DVD		1
	2 DVD		2
	3 DVD		3
	4 DVD		4
	5 DVD		5
	6 DVD		6
	7 DVD		7
	8 DVD		8
	9 DVD		9
	0 DVD		0
	AV DVD		AV
	Demo DVD		Pre Ch
	Play DVD		Play
	<< DVD		<<
	>> DVD		>>





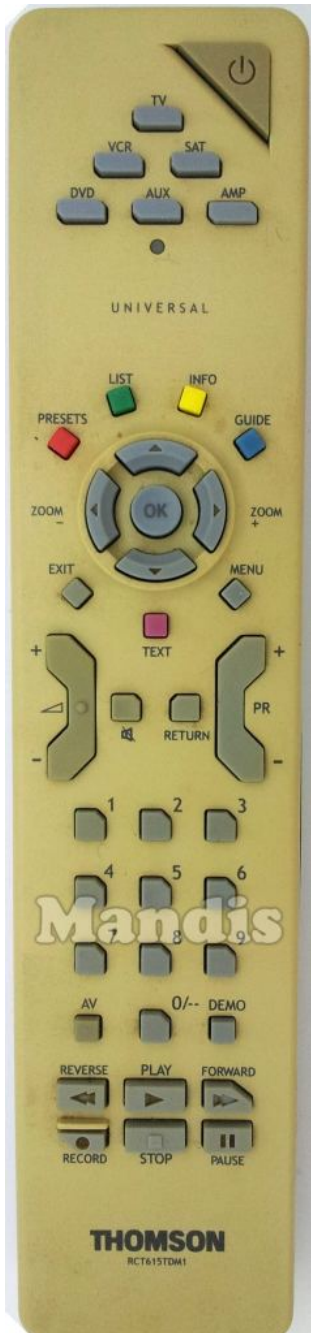

 

 
 
 

 







 

 

 

 

 

 

 







**Originalfernbedienung    Ersatzfernbedienung**

	Record DVD		Rec
	Stop DVD		Stop
	Pause		Pause
	TV		TV/R
	VCR		Smart
	SAT		Media
	DVD		Options
	AUX		Format
	AMP		3D
	Power VCR		Shift + Power
	Red/Presets		Shift + Red
	Green/List VCR		Shift + Green
	Yellow/Info VCR		Shift + Yellow
	Blue/Guide VCR		Shift + Blue
	Violet/Text VCR		Shift + Text
	Exit VCR		Shift + Exit
	Menu VCR		Shift + Menu

**Originalfernbedienung    Ersatzfernbedienung**

	Up VCR		Shift + Up
	Down VCR		Shift + Down
	Right/Zoom+		Shift + Right
	Left/Zoom- VCR		Shift + Left
	OK VCR		Shift + Ok
	Return VCR		Shift + Back
	PR+ VCR		Shift + Ch +
	PR- VCR		Shift + Ch -
	1 VCR		Shift + 1
	2 VCR		Shift + 2
	3 VCR		Shift + 3
	4 VCR		Shift + 4
	5 VCR		Shift + 5
	6 VCR		Shift + 6
	7 VCR		Shift + 7
	8 VCR		Shift + 8
	9 VCR		Shift + 9


 

 
 
 
 





 


 













 

 





 

 

 

 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	TV		TV/R
	VCR		Smart
	SAT		Media
	DVD		Options
	AUX		Format
	AMP		3D
	Red/Presets		Red
	Green/List		Green
	Yellow/Info		Yellow
	Blue/Guide		Blue
	Violet/Text		Text
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	OK		Ok

**Originalfernbedienung    Ersatzfernbedienung**

	Exit		Exit
	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return		Back
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9



 

 





 



 






 



 







 
 






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	TV		TV/R
	VCR		Smart
	SAT		Media
	DVD		Options
	AUX		Format
	AMP		3D
	Red/Presets		Red
	Yellow/Info		Yellow
	Blue/Guide		Blue
	Violet/Text		Text
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	OK		Ok
	Exit		Exit

**Originalfernbedienung Ersatzfernbedienung**

	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return		Back
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0



