
 

 



 









 


 






 
 

 
 








 


 

 

 




 






 

 
Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
POWER		Power	
EXIT		Exit	
MENU		Menu	
AUDIO		Dual	
VIDEO		Media	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
EPG		Guide	
FAV		Pre Ch	
OK		Ok	
∧		Up	
∨		Down	
<		Left	
>		Right	
VOL +		Vol +	
VOL -		Vol -	
CH -		Ch -	
CH +		Ch +	
MUTE		Mute	
TXT		Text	
TV/RADIO		TV/R	
ASPECT		Format	
RED		Red	
GREEN		Green	
YELLOW		Yellow	
BLUE		Blue	



Originalfernbedienung Ersatzfernbedienung

I<<		I<<
>>I		>>I
STOP		Stop
REC		Rec
<<		<<
PLAY/PAUSE		Play
>>		>>
F1	 + 	Shift + 1
F2	 + 	Shift + 2
F3	 + 	Shift + 3
F4	 + 	Shift + 4
PLAY/PAUSE		Pause
I<<	 + 	Shift + I<<
>>I	 + 	Shift + >>I
BACK		Back
TIMER		AV
ARROW <	 + 	Shift + Left

Originalfernbedienung Ersatzfernbedienung

ARROW >	 + 	Shift + Right
OPTIONS		Options
F. LIST		Smart
G. LIST		List
INFO		Info
HISTORY		D. Menu

