 

 
 



 















 
 
 

 
 


 






Originalfernbedienung Ersatzfernbedienung

|   |                  |   |                |
|---|------------------|---|----------------|
|    | Power On         |    | Power          |
|    | Power Off        |    | Shift + Power  |
|    | Power DVD/VDP    |    | Shift + 3      |
|    | Power VCR        |    | Shift + 9      |
|    | Power TV         |    | TV/R           |
|    | Mode             |    | Yellow         |
|    | Mode Cinema      |    | Green          |
|    | Mode Music       |    | Shift + Red    |
|    | Mode DSP SIM.    |    | Blue           |
|    |                  |    | Shift + Yellow |
|   | Mode Stereo      |   | Shift + Green  |
|  | Virtual Surround |  | Options        |
|  | Mode 5CH         |  | Red            |
|  | Input Phono      |  | 5              |
|  | Input CD         |  | 1              |
|  | Input Tuner      |  | 6              |
|  | Input DVD / VDP  |  | 3              |

Originalfernbedienung Ersatzfernbedienung

|   |                               |   |               |
|---|-------------------------------|---|---------------|
|    | Input TV/BDS                  |    | 7             |
|    | Input VCR                     |    | 9             |
|    | Input V.Aux                   |    | 8             |
|    | Input Tape                    |    | 2             |
|    | Tv Vol+                       |    | Shift + Vol + |
|    | Tuning+                       |    | Shift + >>    |
|    | Tv Vol-                       |    | Shift + Vol - |
|    | Tuning-                       |    | Shift + <<    |
|    | Channel+                      |    | Ch +          |
|    | Tv CH+                        |    | Shift + Ch +  |
|   | Channel-                      |   | Ch -          |
|  | Tv CH-                        |  | Shift + Ch -  |
|  | Mode                          |  | D. Menu       |
|  | Band                          |  | Media         |
|  | Shift                         |  | 3D            |
|  | Play<br>CD/MD/CDR-DVD/        |  | Play          |
|  | Stop<br>CD/MD/CDR-DVD/<br>VDP |  | Stop          |





Originalfernbedienung    Ersatzfernbedienung

|  |                  |  |       |
|--|------------------|--|-------|
|  | I<<              |  | I<<   |
|  | >>I              |  | >>I   |
|  | <<               |  | <<    |
|  | >>               |  | >>    |
|  | Pause            |  | Pause |
|  | Disc Skip+       |  | List  |
|  | Vol+             |  | Vol + |
|  | Vol-             |  | Vol - |
|  | Mute             |  | Mute  |
|  | Setup            |  | Menu  |
|  | Surround         |  | Subt  |
|  | Up               |  | Up    |
|  | Left             |  | Left  |
|  | CH.Select/Select |  | Ok    |
|  | Right            |  | Right |
|  | Down             |  | Down  |
|  | Display          |  | Info  |

Originalfernbedienung    Ersatzfernbedienung

|  |              |  |        |
|--|--------------|--|--------|
|  | Return       |  | Back   |
|  | Test Tone    |  | Text   |
|  | Video Select |  | Format |
|  | Dimmer       |  | Sleep  |
|  | Speaker      |  | Dual   |
|  | Input Mode   |  | 4      |
|  | Input Analog |  | Guide  |
|  | Input Ext-In |  | Pre Ch |
|  | Tuner Mode   |  | Smart  |

