












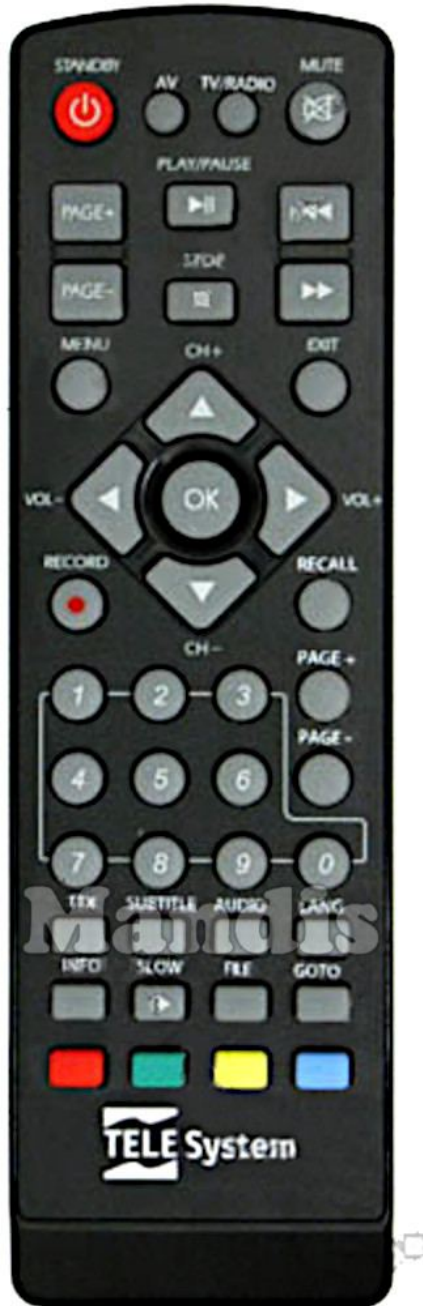
Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	AV		AV / Input / RDS
	TV / Radio		TV/Radio /
	Mute		Mute / Dimmer
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	Menu		Menu / Home
	Up / CH+		Up
	Up / CH+		Shift + Up
	Exit		Exit / Cancel / Clear
	Left / Vol-		Shift + Left
	Left / Vol-		Left
	OK		OK
	Right / Vol+		Shift + Right

Originalfernbedienung Ersatzfernbedienung

	Right / Vol+		Right
	Record		Rec / Rec Mode
	Down / CH-		Shift + Down
	Down / CH-		Down
	Recall		Back / Return
	1		1
	2		2
	3		3
	Page+		CH+ / Page+
	Page+		Shift + CH+ /
	4		4
	5		5
	6		6
	Page-		Shift + CH- /
	Page-		CH- / Page-
	7		7
	8		8





Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	TTX		Text / Goto
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Lang		Shift + Audio / Lang I/II
	Info		Info / Angle
	Slow		Shift + Play /
	File		Setup / OPT /
	Goto		Shift + Text /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung