




 

 

 












 
 







 

 



 




Originalfernbedienung Ersatzfernbedienung

	RCVR On		Power
	RCVR Standby		Shift + Power
	RCVR Sleep		Sleep
	RCVR Return		Back
	RCVR Setup		Options
	RCVR Disc+		Ch +
	RCVR Disc-		Ch -
	RCVR Up		Up
	RCVR Left		Left
	RCVR Enter		Ok
	RCVR Right		Right
	RCVR Down		Down
	RCVR Vol+		Vol +
	RCVR Vol-		Vol -
	RCVR Muting		Mute
	RCVR CH Sel / Top Menu		Shift + Menu
	RCVR CH Sel / Top Menu		D. Menu

Originalfernbedienung Ersatzfernbedienung

	RCVR Test / Menu		Menu
	RCVR Audio		Dual
	RCVR Level		Media
	RCVR Level Up		Smart
	RCVR I<<<		I<<<
	RCVR Play		Play
	RCVR >>>I		>>>I
	RCVR <<<		<<<
	RCVR Stop		Stop
	RCVR >>>		>>>
	RCVR Rec /		Rec
	RCVR Pause / Play Rev.		Pause
	Open / Close		Eject
	RCVR Input Sel.		1
	RCVR Input Sel.		2
	RCVR Input Sel.		3
	RCVR Input Sel.		4


 
 
 




Originalfernbedienung Ersatzfernbedienung

	RCVR Input Sel.		5
	RCVR Input Sel.		6
	RCVR Input Sel.		7
	RCVR Input Sel.		8
	RCVR Input Sel.		9
	RCVR Input Sel.		0
	RCVR Stereo	 + 	Shift + 1
	RCVR Direct	 + 	Shift + 2
	RCVR DSP ▶	 + 	Shift + 3
	RCVR SURR	 + 	Shift + 4
	RCVR A.ST	 + 	Shift + 5
	RCVR ◀ DSP	 + 	Shift + 6
	RCVR SP A	 + 	Shift + 7
	RCVR SP B	 + 	Shift + 8
	RCVR Re-EQ	 + 	Shift + 9
	RCVR Dimmer	 + 	Shift + 0
	RCVR Display		Info






 

 




 

 

 

 
 


 


 

 



 

 
Originalfernbedienung Ersatzfernbedienung

	RCVR Display		Guide
	RCVR Zone 2		Pre Ch



 


 


 








Originalfernbedienung Ersatzfernbedienung

	ON		Power
	STDBY		Shift + Power
	Return		Back
	Setup		Options
	Disc+		Ch +
	Disc-		Ch -
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Top Menu		D. Menu
	Menu		Menu
	Angle		Format




 

 



 
Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subt
	I<<		I<<
	Play		Play
	>>I		>>I
	<<		<<
	Stop		Stop
	>>		>>
	Random		Text
	Pause		Pause
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	+10		Guide
	Search		TV/R

 










Originalfernbedienung Ersatzfernbedienung



 

Originalfernbedienung Ersatzfernbedienung

	ON		Power
	STDBY		Shift + Power
	Disc+		Ch +
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	I<<		I<<
	Play		Play
	>>I		>>I
	<<		<<
	Stop		Stop
	>>		>>
	Random		Text
	Pause		Pause
	Open / Close		Eject
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide


 

 


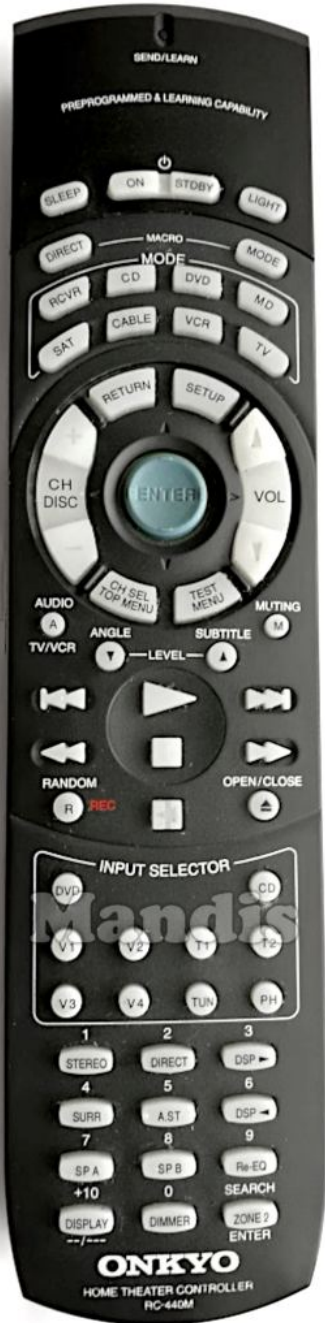











 

 





Originalfernbedienung Ersatzfernbedienung

	ON		Power
	STDBY		Shift + Power
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	I<<		I<<
	Play		Play
	>>I		>>I
	<<		<<
	Stop		Stop
	>>		>>
	Rec / Random		Text
	Rec / Random		Rec
	Pause		Pause
	Open / Close		Eject
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Enter		Pre Ch
	Enter		Ok

