





















 





**Originalfernbedienung    Ersatzfernbedienung**

















Audio Off		Mute / Dimmer
Game		Blue / Prime Video / Random
Pbc		AV / Input / RDS
Digest		Text / Goto
C/CH		Sleep / Timer
Auto/Track		Picture / Format
DVD/TV		Smart / List
3D	 + 	Shift + 3
Menu Down		Down
Slow Down		CH- / Page-
Slow Up		CH+ / Page+
OK Enter		OK
Menu Up		Up
Progr.		TV/Radio /
Menu Right		Right
2		2
Menu Left		Left

**Originalfernbedienung    Ersatzfernbedienung**

Rep/A-B		Yellow / YouTube / Repeat
Rewind		<< / Tune-
Repeat/1/All		Green / APP / Repeat
Prev.		I<< / Preset-
F.Forward		>> / Tune+
3		3
4		4
5		5
6		6
7		7
8		8
9		9
+10		Guide / EPG / -/-
0		0
1		1
Angle		Info / Angle
Play		Play / Slow



Originalfernbedienung    Ersatzfernbedienung

Record		Rec / Rec Mode
Audio		Audio / Lang I/II
Setup		Setup / OPT /
Mark		Fav / Marker / PC
Open/Close		Eject / Surround
Menu		Menu / Home
Stop		Stop / Hold
Pause		Pause / Step / Freeze
Subt.		Subtitle / EQ
Title		Sound / Title
Zoom		Zoom / Size
On/Off		Power
Display		Display / Media
Return		Back / Return
Next		>>I / Preset+
Top Menu		D.Menu / Top

Originalfernbedienung    Ersatzfernbedienung