









 
 


















 







 
 
 

 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Next		>>I	
Audio Off		Mute	
Slow Down		Ch -	
Slow Up		Ch +	
Auto/Track		Media	
Rep/A-B	 + 	Shift + Text	
Stop		Stop	
Pause		Pause	
Title		List	
Subt.		Subt	
Repeat/1/All		Text	
Zoom		Eject	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
Menu Right		Right	
Return		Back	
Progr.		Sleep	
Rewind		<<	
Menu Down		Down	
Top Menu		D. Menu	
Volume+		Vol +	
Prev.		I<<	
Volume-		Vol -	
1		1	
2		2	
3		3	
4		4	
Shuffle		TV/R	
5		5	
6		6	
Digest		Smart	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
7			
8			
Play			
9			
+10			
Record			
Clear/00:00			
0			
C/CH			
F.Forward			
Setup	