













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Home		Smart
	[.]		Media
	Play		Play
	All>		Pre Ch
	<<		<<
	Pause		Pause
	>>		>>
	I<		I<<
	Stop		Stop
	>		>>
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Rotate		Options

Originalfernbedienung Ersatzfernbedienung

	Title		List
	Zoom		Eject
	Return		Back
	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Audio		Dual
	Subtitle		Subt
	◆		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	Info		Info
	Search		Shift + TV/R
	Red/Movies		Red
	Green/Music		Green
	Blue/Pictures		Blue
	Yellow/Settings		Yellow
	Slow		3D
	Angle		Exit
	Thumbnails		Guide
	Tv Out		TV/R
	Repeat		Text
	Repeat A-B		AV
	A1		Sleep
	A2		D. Menu

Originalfernbedienung Ersatzfernbedienung

