
 

 
 

 





 




 


 
 
 
 

 

 
 



 

 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|---------------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | AV |  | AV |
|  | TV / Rad |  | TV/R |
|  | Audio |  | Dual |
|  | SUB |  | Subt |
|  | APP |  | Media |
|  | Guida |  | Guide |
|  | Lista |  | Shift + Ok |
|  | Info |  | Info |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | Ok |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|--------|
|  | Right |  | Right |
|  | Down |  | Down |
|  | Back |  | Back |
|  | Exit |  | Exit |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |



