


 

















 

 





 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV / Radio		TV/R
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Guide		Guide
	Exit		Exit
	Back		Back

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	P- / Page-		Ch -
	P+ / Page+		Ch +
	V-		Vol -
	V+		Vol +
	Menu		Menu
	i		Info
	Mute		Mute
	Text		Text





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	SUB		Subt
	Audio		Dual
	Wide		Eject
	OPT+		Options
	V-Format		Format

