
 

 

 







 



 



 

 

 







 




**Originalfernbedienung    Ersatzfernbedienung**

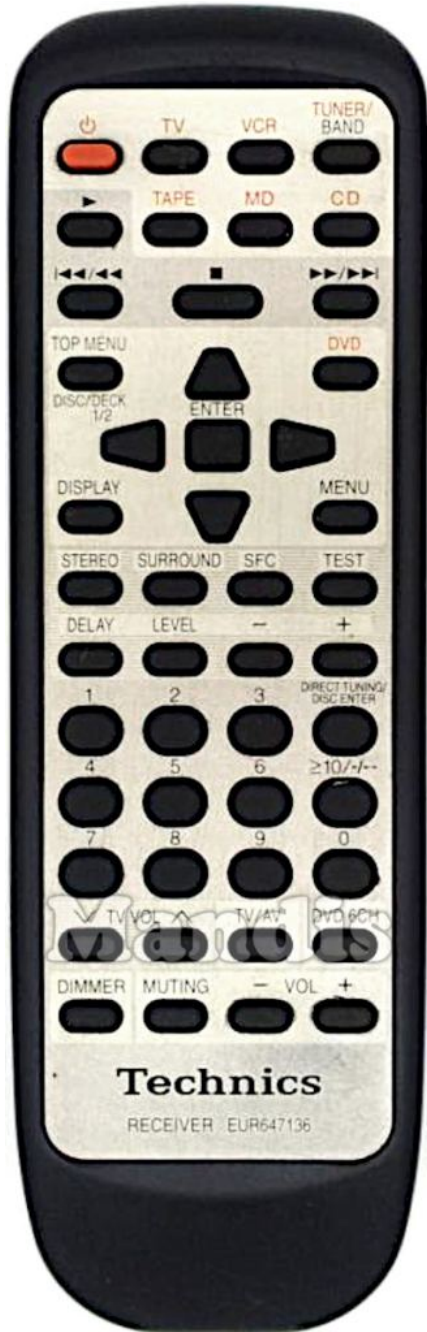 
	Power MD		Power
	Direct Tuning		Text
	Dimmer		Pre Ch
	TV		TV/R
	CD		Yellow
	DVD		Blue
	Tuner/Band		Green
	Tape		Red
	VCR		Smart
	MD		Media
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Stop MD		Stop
	Play MD		Play
	<</ << MD		<<
	>>/>>  MD		>>

**Originalfernbedienung    Ersatzfernbedienung**

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Menu		D. Menu
	Display		Info
	Top Menu/Disc/Deck		Menu
	1 MD		1
	2 MD		2
	3 MD		3
	4 MD		4
	5 MD		5
	6 MD		6
	7 MD		7
	8 MD		8
	9 MD		9




 


 

 
 
 


 
 
 
 

 

 


 





 


 







**Originalfernbedienung    Ersatzfernbedienung**

	Power DVD		Power
	TV		TV/R
	VCR		Smart
	Tuner/Band		Green
	Tape		Red
	MD		Media
	CD		Yellow
	DVD		Blue
	Play DVD		Play
	I<<</>> DVD		<<
	Stop DVD		Stop
	>>>/<<< DVD		>>
	Top Menu/Disc/Deck		Menu
	Display		Info
	Menu		D. Menu
	Up		Up
	Down		Down

**Originalfernbedienung    Ersatzfernbedienung**

 

	Right		Right
	Left		Left
	Enter		Ok
	Stereo		Dual
	Surround		Options
	SFC		Subt
	Test		Back
	Delay		Format
	Level		3D
	+		Ch +
	-		Ch -
	1 DVD		1
	2 DVD		2
	3 DVD		3
	4 DVD		4
	5 DVD		5
	6 DVD		6







 
 
 
 
 
 

 
 
 

 

 
 

 



 

 
 










**Originalfernbedienung    Ersatzfernbedienung**

	Power CD		Power
	TV		TV/R
	VCR		Smart
	CD		Yellow
	DVD		Blue
	Tape		Red
	MD		Media
	Tuner/Band		Green
	Stop CD		Stop
	I<</<< CD		<<
	>>/>>I CD		>>
	Play CD		Play
	Menu		D. Menu
	Display		Info
	Top Menu/Disc/Deck		Menu
	Up		Up
	Down		Down

**Originalfernbedienung    Ersatzfernbedienung**

	Right		Right
	Left		Left
	Enter		Ok
	Stereo		Dual
	Surround		Options
	SFC		Subt
	Test		Back
	Delay		Format
	Level		3D
	+		Ch +
	-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Power Tape		Shift + Power
	Stop Tape		Shift + Stop
	Play Tape		Shift + Play







**Originalfernbedienung    Ersatzfernbedienung**

	Power VCR		Power
	Dimmer		Pre Ch
	VCR		Smart
	Tape		Red
	TV		TV/R
	CD		Yellow
	DVD		Blue
	Tuner/Band		Green
	MD		Media
	Stop		Stop
	I<</<<		<<
	>>/>>I		>>
	Play		Play
	1 VCR		1
	2 VCR		2
	3 VCR		3
	4 VCR		4

**Originalfernbedienung    Ersatzfernbedienung**

 
 
 
 
 
 
 
 

 
















	5 VCR		5
	6 VCR		6
	7 VCR		7
	8 VCR		8
	9 VCR		9
	0 VCR		0
	>10/-/- VCR		Guide
	Direct Tuning/Disc Enter		Text
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Top Menu/Disc/Deck		Menu

1/2






**Originalfernbedienung    Ersatzfernbedienung**

	Display		Info
	Menu		D. Menu
	Stereo		Dual
	Surround		Options
	SFC		Subt
	Test		Back
	Delay		Format
	Level		3D
	+		Ch +
	-		Ch -
	Power Tuner/Band		Shift + Power
	1 Tuner/Band		Shift + 1
	2 Tuner/Band		Shift + 2
	3 Tuner/Band		Shift + 3
	4 Tuner/Band		Shift + 4
	5 Tuner/Band		Shift + 5
	6 Tuner/Band		Shift + 6

**Originalfernbedienung    Ersatzfernbedienung**

	7 Tuner/Band		Shift + 7
	8 Tuner/Band		Shift + 8
	9 Tuner/Band		Shift + 9
	0 Tuner/Band		Shift + 0
	>10/-/-		Shift + Guide

