


 


 

 

 







 

 



 
 
 
 
 
 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Theatre	 + 	Shift + Power
	Sleep		Sleep
	Tuner Menu		D. Menu
	AMP Menu		Media
	Function		Smart
	Sound Field		Green
	Repeat / FM Mode		Text
	Tuner Band		TV/R
	Display		Info
	Picture Navi		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Audio		Dual
	Subtitle		Subt
	Angle		Red
	Album-	 + 	Shift + Ch -
	Album+	 + 	Shift + Ch +
	Top Menu	 + 	Shift + Menu
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down










 

 







 

 






 

 





Originalfernbedienung Ersatzfernbedienung

	Return		Back
	Display		Shift + Info
	Muting		Mute
	Volume+		Vol +
	Volume-		Vol -
	I<</Preset-		I<<
	<-/Replay/<II Step		Ch -
	Step II>/Advance/->		Ch +
	>>I/Preset+		>>I
	<<</<I/Tuning-		<<
	I>/>>/Tuning+		>>
	Play		Play
	Pause		Pause
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	-/--		Guide				
	TV Vol+		Vol +				
	TV Vol-		Vol -				
	TV CH+		Ch +				
	TV CH-		Ch -				
	Tv/Video		TV/R				

