
 


 


 

 
 



 














 
 
 

 
 



Originalfernbedienung Ersatzfernbedienung


 
 


 
 
 

 


 
 



On/Off		Power
Mute		Mute
Update		List
Reveal	 + 	Shift + List
Txt Stop		Stop
Info		Info
Subt.List		Subt
Sleep Timer		Sleep
Return TV		TV/R
Menu video		D. Menu
Text		Text
Txt Expand		Eject
TV/AV		AV
Menu		Menu
Menu Up		Up
Display	 + 	Shift + Info
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung

 
 
 
 
OK Enter		Ok
Menu Right		Right
Menu Off		Exit
Menu Down		Down
Back		Back
Volume+		Vol +
Chan.Up		Ch +
Menu audio		Dual
Volume-		Vol -
Chan.Down		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Originalfernbedienung Ersatzfernbedienung

8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
On/Tim		Options
Mix Scan		Play
Bright+ Mode		>>I
Green		Green
Rotate Text		>>
Audio+		3D
Disp		Format
Yellow		Yellow
Bright- Sys		I<<
Blue		Blue
Color+ P.Std		Shift + Format

Originalfernbedienung Ersatzfernbedienung

Store Text		Shift + Text
Search		Shift + TV/R
Tone+		Shift + Up
Store		Smart
Browse		Media
Tune-		Shift + Left
Color- S.Std		Shift + Dual
Aft/Caf		Shift + Ok
Tone-		Shift + Down
Tune+		Shift + Right
Contrast+		Shift + Ch +
Contrast-		Shift + Ch -
3.*		Shift + Guide
Surround		Shift + Red
Nicam/Mono		Shift + Green
Level L		Shift + Yellow
Level R/Woofer		Shift + Blue

