 




 

 

























**Originalfernbedienung    Ersatzfernbedienung**

|   |       |   |                       |
|---|-------|---|-----------------------|
|    | Eject |    | Eject / Surround      |
|    | Power |    | Power                 |
|    | 1     |    | 1                     |
|    | 2     |    | 2                     |
|    | 3     |    | 3                     |
|    | 4     |    | 4                     |
|    | 5     |    | 5                     |
|    | 6     |    | 6                     |
|    | 7     |    | 7                     |
|    | 8     |    | 8                     |
|    | 9     |    | 9                     |
|   | A.Sel |   | D.Menu / Top          |
|  | 0     |  | 0                     |
|  | AV    |  | AV / Input / RDS      |
|  | >> 30 |  | >>I / Preset+         |
|  | Play  |  | Play / Slow           |
|  | Pause |  | Pause / Step / Freeze |

**Originalfernbedienung    Ersatzfernbedienung**





 

 













|   |        |   |                |
|---|--------|---|----------------|
|    | <<     |    | << / Tune-     |
|    | >>     |    | >> / Tune+     |
|    | Rec    |    | Rec / Rec Mode |
|    | Stop   |    | Stop / Hold    |
|    | I>     |    | I<< / Preset-  |
|    | Prog   |    | TV/Radio /     |
|    | SP/LP  |    | Setup / OPT /  |
|    | PR+    |    | CH+ / Page+    |
|    | PR+    |    | Up             |
|    | Menu   |    | Menu / Home    |
|    | [A]    |    | Text / Goto    |
|   | ←      |   | Left           |
|  | OK     |  | OK             |
|  | →      |  | Right          |
|  | Index- |  | Vol-           |
|  | Index+ |  | Vol+           |
|  | PR-    |  | CH- / Page-    |







**Originalfernbedienung    Ersatzfernbedienung**

|   |       |   |                       |
|---|-------|---|-----------------------|
|    | Eject |    | Eject / Surround      |
|    | Power |    | Power                 |
|    | 1     |    | 1                     |
|    | 2     |    | 2                     |
|    | 3     |    | 3                     |
|    | 4     |    | 4                     |
|    | 5     |    | 5                     |
|    | 6     |    | 6                     |
|    | 7     |    | 7                     |
|    | 8     |    | 8                     |
|    | 9     |    | 9                     |
|   | A.Sel |   | D.Menu / Top          |
|  | 0     |  | 0                     |
|  | AV    |  | AV / Input / RDS      |
|  | >>30  |  | >>I / Preset+         |
|  | Play  |  | Play / Slow           |
|  | Pause |  | Pause / Step / Freeze |

**Originalfernbedienung    Ersatzfernbedienung**

 























 
|   |          |   |                |
|---|----------|---|----------------|
|    | <<       |    | << / Tune-     |
|    | >>       |    | >> / Tune+     |
|    | Rec      |    | Rec / Rec Mode |
|    | Stop     |    | Stop / Hold    |
|    | I>       |    | I<< / Preset-  |
|    | SV/V+    |    | TV/Radio /     |
|    | SP/LP    |    | Setup / OPT /  |
|    | Up/PR+   |    | CH+ / Page+    |
|    | Up/PR+   |    | Up             |
|    | Menu     |    | Menu / Home    |
|    | [A]      |    | Text / Goto    |
|   | Left     |   | Left           |
|  | OK       |  | OK             |
|  | Right    |  | Right          |
|  | Index-   |  | Vol-           |
|  | Index+   |  | Vol+           |
|  | Down/PR- |  | CH- / Page-    |







**Originalfernbedienung    Ersatzfernbedienung**

|   |       |   |                       |
|---|-------|---|-----------------------|
|    | Eject |    | Eject / Surround      |
|    | Power |    | Power                 |
|    | 1     |    | 1                     |
|    | 2     |    | 2                     |
|    | 3     |    | 3                     |
|    | 4     |    | 4                     |
|    | 5     |    | 5                     |
|    | 6     |    | 6                     |
|    | 7     |    | 7                     |
|    | 8     |    | 8                     |
|    | 9     |    | 9                     |
|    | A.Sel |    | D.Menu / Top          |
|   | 0     |   | 0                     |
|  | AV    |  | AV / Input / RDS      |
|  | >>30  |  | >>I / Preset+         |
|  | Play  |  | Play / Slow           |
|  | Pause |  | Pause / Step / Freeze |

 





**Originalfernbedienung    Ersatzfernbedienung**

|   |          |   |                |
|---|----------|---|----------------|
|    | <<       |    | << / Tune-     |
|    | >>       |    | >> / Tune+     |
|    | Rec      |    | Rec / Rec Mode |
|    | Stop     |    | Stop / Hold    |
|    | I>       |    | I<< / Preset-  |
|    | SV/V+    |    | TV/Radio /     |
|    | SP/LP    |    | Setup / OPT /  |
|    | Down/PR- |    | CH- / Page-    |
|    | Up/PR+   |    | Up             |
|    | Menu     |    | Menu / Home    |
|    | [A]      |    | Text / Goto    |
|    | Left     |    | Left           |
|   | OK       |   | OK             |
|  | Right    |  | Right          |
|  | Index-   |  | Vol-           |
|  | Index+   |  | Vol+           |
|  | Up/PR+   |  | CH+ / Page+    |





Originalfernbedienung   Ersatzfernbedienung

|   |          |   |                  |
|---|----------|---|------------------|
|  | Down/PR- |  | Down             |
|  | Tv/VCR   |  | Display / Media  |
|  | PAL/SEC  |  | Picture / Format |
|   |          |   |                  |
|   |          |   |                  |
|   |          |   |                  |
|   |          |   |                  |
|   |          |   |                  |
|   |          |   |                  |
|   |          |   |                  |
|   |          |   |                  |
|   |          |   |                  |
|   |          |   |                  |
|   |          |   |                  |
|   |          |   |                  |
|   |          |   |                  |
|   |          |   |                  |
|   |          |   |                  |
|   |          |   |                  |

Originalfernbedienung   Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

