
 
 


 

 
 
 
 

 
 






 




 
 

 
 

 
 




Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Mute		Mute
Update		Media
Reveal		Smart
Txt Stop		Stop
Subt.List		Subt
Info		Info
Sleep Timer		Sleep
Return TV		TV/R
Menu video		D. Menu
Text		Text
Txt Expand		Eject
TV/AV		AV
Menu		Menu
Menu Up		Up
Display	 + 	Shift + Info
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung


 






 







 



 


 


 



OK Enter		Ok
Menu Right		Right
Menu Off		Exit
Menu Down		Down
Back		Back
Volume+		Vol +
Chan.Up		Ch +
Volume-		Vol -
Menu audio		Dual
Chan.Down		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Originalfernbedienung Ersatzfernbedienung


 





 

 
 

 

 


 

8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Bright+ Mode		Options
Mix Scan	 + 	Shift + Smart
Game Coo	 + 	Shift + Options
Aft/Caf	 + 	Shift + Menu
Blue		Blue
On/Tim		List
Off/Tim	 + 	Shift + List
Store	 + 	Shift + Media
AV 2	 + 	Shift + AV

Originalfernbedienung Ersatzfernbedienung



 








 

 
 
 
 
Search	 + 	Shift + TV/R
Rotate Text	 + 	Shift + 3D
Disp		3D
Color+ P.Std	 + 	Shift + Format
Store Text	 + 	Shift + Text
Tune-	 + 	Shift + Left
Tune+	 + 	Shift + Right
Contrast+	 + 	Shift + Ch +
Color- S.Std	 + 	Shift + Dual
Contrast-	 + 	Shift + Ch -
3.*	 + 	Shift + Guide
4.# 16:9		Format
Surround	 + 	Shift + Red
Nicam/Mono	 + 	Shift + Green
Level L	 + 	Shift + Yellow
Level R/Woofer	 + 	Shift + Blue



Originalfernbedienung Ersatzfernbedienung


 
 
 
 

 

 

 

 


 



On/Off		Power
Mute		Mute
Update	 + 	Shift + Smart
Txt Stop		Stop
Reveal		Smart
Info		Info
Subt.List		Subt
Sleep Timer		Sleep
Return TV		TV/R
Menu video		D. Menu
Text		Text
Txt Expand		Eject
TV/AV		AV
Menu		Menu
Menu Up		Up
Display	 + 	Shift + Info
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung



 
OK Enter		Ok
Menu Right		Right
Menu Off		Exit
Menu Down		Down
Back		Back
Volume+		Vol +
Chan.Up		Ch +
Menu audio		Dual
Volume-		Vol -
Chan.Down		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Originalfernbedienung Ersatzfernbedienung

8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Audio+	 + 	Shift + List
Bright+ Mode	 + 	Shift + 3D
Green		Green
Rotate Text		Play
Mix Scan		List
Aft/Caf	 + 	Shift + Ok
Yellow		Yellow
Blue		Blue
Color+ P.Std	 + 	Shift + Format
Tone-	 + 	Shift + Down
Search	 + 	Shift + TV/R

Originalfernbedienung Ersatzfernbedienung

Tone+	 + 	Shift + Up
Disp		3D
Store Text	 + 	Shift + Text
Store		Media
On/Tim		Options
Off/Tim	 + 	Shift + Options
AV 2	 + 	Shift + AV
Color- S.Std	 + 	Shift + Dual
4.# 16:9		Format
Tune-	 + 	Shift + Left
Tune+	 + 	Shift + Right
Browse	 + 	Shift + Back
Contrast+	 + 	Shift + Ch +
Contrast-	 + 	Shift + Ch -
Surround	 + 	Shift + Red
Nicam/Mono	 + 	Shift + Green
Level L	 + 	Shift + Yellow



Originalfernbedienung Ersatzfernbedienung

Level R/Woofer	SHIFT + D	Shift + Blue

Originalfernbedienung Ersatzfernbedienung

