


 

 
 

 

 
 
 
 




 


 

 







Originalfernbedienung Ersatzfernbedienung

	AVR/AVC On		Power
	AVR/AVC Off		Shift + Power
	Power Tv		TV/R
	Power VCR		Smart
	Power DVD/VDP		Media
	PHONO		1
	CD		2
	DVD/VDP		3
	VCR-1		4
	VCR-2 / V.AUX		5
	TV/DBS		6
	MD/Tape Mon		7
	Tuner		8
	Shift		9
	Video Select		0
	Input Mode		Guide
	Surround Mode		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	<< Deck-VCR		Shift + <<
	< Deck-VCR		Shift + Play
	Deck-VCR >		Shift + Pause
	Deck-VCR >>		Shift + >>
	Stop Deck-VCR		Shift + Stop
	CH+		Ch +
	CH-		Ch -
	Disc Skip+		Blue
	Play CD/MD/CDR-DVD/		Play
	Stop CD/MD/CDR-DVD/		Stop
	Pause CD/MD/CDR-DVD/		Pause
	CD/MD/CDR-DVD/ VDP >>I		>>I
	I<< CD/MD/CDR-DVD/		I<<
	CD/MD/CDR-DVD/ VDP >>		>>
	<< CD/MD/CDR-DVD/		<<
	System/Setup		Menu
	Surround/Menu		D. Menu



