 




 


 
 

 

 
 
 

 


 

 

 









 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	TV		Smart
	DVD		Media
	P.Mode		Format
	S.Mode		Shift + Dual
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sleep		Sleep


 

Originalfernbedienung Ersatzfernbedienung

	PP		Pre Ch
	Mute		Mute
	Zoom		Eject
	Info		Info
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Reset		Back
	N/P		TV/R
	Nicam		Options




 

 
 
 



 



 





 
 
 






 
 






Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	TV		Smart
	DVD		Media
	PMode		Format
	SMode		Shift + Dual
	Nicam		Options
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0






Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	Angle		3D
	OSD		Info
	PRO		Exit
	GoTo		Pre Ch
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Title / Return		Back
	N/P		TV/R





Originalfernbedienung Ersatzfernbedienung

	Audio		Dual
	SET		Guide
	REP		Text
	PBC		Red
	SUB		Subt
	Eject		Eject
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	A-B	 + 	Shift + Play
	<<		<<
	>>		>>
	>		>>
	<		<<

Originalfernbedienung Ersatzfernbedienung

