



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Display	 + 	Shift + Info
	Auto		Smart
	Pic. Size		Eject
	P.Mode		Format
	S.Mode	 + 	Shift + Dual
	Still		Pause
	DVB Source		Media
	Info		Info
	FAV		Pre Ch
	EPG		Guide
	Audio		Dual
	Subtitle		Subt
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Return		Back
	System		Options
	Nicam / A2		List
	Fav-		I<<
	Fav+		>>I
	Menu		Menu
	Exit		Exit
	Up / CH+		Up
	Up / CH+		Ch +


 

 

 






Originalfernbedienung Ersatzfernbedienung

	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	Enter		Ok
	TV / AV		AV
	Sleep		Sleep
	Text		Text
	Hold		Stop
	Index		Shift + Smart
	Cancel		Shift + Exit
	Mix		Shift + Text
	Size		Shift + Eject
	Sub Page		Shift + Subt
	Reveal		Shift + Media

Originalfernbedienung Ersatzfernbedienung

	Red		Red
	Green		Green
	Yellow		Yellow
	Cyan		Blue

