










 

 







 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	TV → HDD		TV/Radio /
	Doc		Picture / Format
	Disc		D.Menu / Top
	Input		AV / Input / RDS
	Input		Smart / List
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Up / CH+		CH+ / Page+
	Up / CH+		Up
	Pause		Pause / Step / Freeze
	Left / V-		Left
	Left / V-		Vol-
	OK / Play		Play / Slow
	OK / Play		OK

Originalfernbedienung Ersatzfernbedienung

	Right / V+		Vol+
	Right / V+		Right
	I<		I<< / Preset-
	>I		>>I / Preset+
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Rec		Rec / Rec Mode
	[i]		Info / Angle
	P / 1		Display / Media
	Menu		Menu / Home
	⊖		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	7		7				
	8		8				
	9		9				
	Repeat		Green / APP / Repeat				
	0		0				
	Zoom		Zoom / Size				
	Language		Audio / Lang I/II				
	[...]		Subtitle / EQ				
	Angle		+		Shift + Info / Angle		

