




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input TAPE 2 MON		Shift + 1
	Input TAPE1		Shift + 2
	Input TUNER		Shift + 3
	Input CD		Shift + 4
	Input PHONO		Shift + 5
	Input AUX		Shift + 6
	Input VCR 2		Shift + 7
	Input VCR 1		Shift + 8
	Input TV / DBS		Shift + 9
	Input LD		Shift + 0
	I<< / Chapter-		I<<
	>>I / Chapter+		>>I
	Pause / Stop		Pause
	Pause / Stop		Stop
	Play		Play
	Display		Info

 

 

 

 
 
 

 

 
 
 





 











 

Originalfernbedienung Ersatzfernbedienung

	<< Search		<<
	Search >>		>>
	Dat-Tape-Vcr Dir		Shift + I<<
	Dat-Tape-Vcr Play		Shift + Play
	Dat-Tape-Vcr Dir		Shift + >>I
	Dat-Tape-Vcr Deck A/B		Shift + Rec
	Dat-Tape-Vcr		Shift + <<
	Dat-Tape-Vcr Stop		Shift + Stop
	Dat-Tape-Vcr		Shift + >>
	Test		Text
	Tuner-Vcr-Tv A/B/C/D/E/F		Smart
	Tuner-Vcr-Tv Preset/CH-		Ch -
	Tuner-Vcr-Tv Preset/CH+		Ch +
	Hall 1		1
	Hall 2		2
	Hall 3		3
	Church		4



 

 

 

 

 



 









Originalfernbedienung Ersatzfernbedienung

	Rock Concert		5
	Jazz Club		6
	Disco		7
	Stadium		8
	Concert Video		9
	TV Theater		0
	Movie Theater		Guide
	12 / DD Pro Logic		Pre Ch
	Front Level +		Shift + Vol +
	Front Level -		Shift + Vol -
	Center Level +		Shift + Smart
	Center Level -		Shift + Media
	Rear Level +		Shift + Ch +
	Rear Level -		Shift + Ch -
	On Screen		Menu
	Effect On/Off		Ok
	Parameter Up		Up

Originalfernbedienung Ersatzfernbedienung

	Set Menu Up		Shift + Up
	Parameter -		Left
	Set Menu -		Shift + Left
	Parameter +		Right
	Set Menu +		Shift + Right
	Parameter		Down
	Set Menu Down		Shift + Down
	Muting		Mute
	Master Volume		Vol +
	Master Volume		Vol -





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input TAPE 2 MON		Shift + 1
	Input TAPE1		Shift + 2
	Input TUNER		Shift + 3
	Input CD		Shift + 4
	Input PHONO		Shift + 5
	Input AUX		Shift + 6
	Input VCR 2		Shift + 7
	Input VCR 1		Shift + 8
	Input TV / DBS		Shift + 9
	Input LD		Shift + 0
	I<< / Chapter-		I<<
	>>I / Chapter+		>>I
	Pause / Stop		Pause
	Pause / Stop		Stop
	Play		Play
	Display		Info


 
 

 

 




 




 

 
 





 






 

Originalfernbedienung Ersatzfernbedienung

	I< Still		List
	Still >I		Options
	<< Search		<<
	Search >>		>>
	Tape-Vcr Dir A		Shift + I<<
	Tape-Vcr Play		Shift + Play
	Tape-Vcr Dir B		Shift + >>I
	Tape-Vcr Deck		Shift + Rec
	Tape-Vcr <<		Shift + <<
	Tape-Vcr Stop		Shift + Stop
	Tape-Vcr >>		Shift + >>
	Test		Text
	Tuner-Vcr-Tv A/B/C/D/E/F		Smart
	Tuner-Vcr-Tv Preset/CH-		Ch -
	Tuner-Vcr-Tv Preset/CH+		Ch +
	Hall 1		1
	Hall 2		2


 






**Originalfernbedienung    Ersatzfernbedienung**

	Hall 3		3
	Church		4
	Rock Concert		5
	Jazz Club		6
	Disco		7
	Stadium		8
	Concert Video		9
	TV Theater		0
	Movie Theater		Guide
	12 / DD Pro Logic		Pre Ch
	Front Level +		Shift + Vol +
	Front Level -		Shift + Vol -
	Center Level +		Shift + Smart
	Center Level -		Shift + Media
	Rear Level +		Shift + Ch +
	Rear Level -		Shift + Ch -
	On Screen		Menu

**Originalfernbedienung    Ersatzfernbedienung**

	Effect On/Off		Ok
	Parameter Up		Up
	Set Menu Up		Shift + Up
	Parameter -		Left
	Set Menu -		Shift + Left
	Parameter +		Right
	Set Menu +		Shift + Right
	Parameter		Down
	Set Menu Down		Shift + Down
	Muting		Mute
	Master Volume		Vol +
	Master Volume		Vol -

