

 

 

 

 
 

 
 




 




 

 

 




 

 
 



 
 


 
 

 
 
 
 
 

 

 



 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Function		Smart
	Input		AV
	Sleep		Sleep
	Return		Back
	EQ		Red
	VSM		Green
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Setup		Options
	Display		Info
	Up / Preset+		Up
	Down / Preset-		Down
	Right / Tun+		Right
	Left / Tun-		Left
	Enter		Ok
	Menu		Menu
	Title		3D
	<< / Scan-		<<
	>> / Scan+		>>
	Play		Play
	<< / Skip-		<<
	>> / Skip+		>>
	Pause / Step		Pause
	Prog. Memo.		TV/R





Originalfernbedienung Ersatzfernbedienung

	Rec		Rec
	Stop		Stop
	Volume+		Vol +
	Volume-		Vol -
	Repeat		Text
	S-Title		Subt
	RDS		Yellow
	PTY		Blue
	HT SPK		Dual
	Clear		Exit
	TV Power		Shift + Power
	TV Input		Shift + AV
	TV Prog+		Shift + Ch +
	TV Prog-		Shift + Ch -
	TV Vol+		Shift + Vol +
	TV Vol-		Shift + Vol -

Originalfernbedienung Ersatzfernbedienung

