 

 

 

 


 

 
 
 

 
 
 

 



 








 



**Originalfernbedienung Ersatzfernbedienung**

	System Power		Power
	Sleep		Sleep
	Disc Skip	 + 	Shift + Smart
	CD		Yellow
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Tape		Green
	Shift		Menu
	Select 10		Info
	P.File		Ch +
	Tuner		Blue
	Phono		Red
	1		1
	2		2

**Originalfernbedienung Ersatzfernbedienung**

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	11		Guide
	12		Pre Ch
	13		AV
	14		Format
	15		3D
	16		Back
	Video 1		Smart
	Video 2		Media
	Video 3	 + 	Shift + Media





Originalfernbedienung Ersatzfernbedienung

	DBFB		Options
	EQ Rec		TV/R
	Direct		Text
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Mode /L/R/L+R		Ok
	Surround		Dual
	Effect		Subt
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung






Originalfernbedienung   Ersatzfernbedienung

	<< Deck A		<<
	>> Deck A		>>
	Stop Deck A		Stop
	< Deck A		Left
	Deck A >		Right
	System Power		Power
	Vol+		Vol +
	Vol-		Vol -
	Pause Deck A		Pause
	O Deck A		Play
	Rec Deck A		Rec
	<< Deck B		I<<
	>> Deck B		>>I
	< Deck B	+	Shift + Left
	Deck B >	+	Shift + Right
	Stop Deck B	+	Shift + Stop
	Pause Deck B	+	Shift + Pause








 





 









Originalfernbedienung   Ersatzfernbedienung

	O Deck B		Text
	Rec Deck B		AV
	CD		Yellow
	Tape		Green
	Tuner		Blue
	Phono		Red
	Video 1		Smart
	Video 2		Media
	Video 3	+	Shift + Media






 






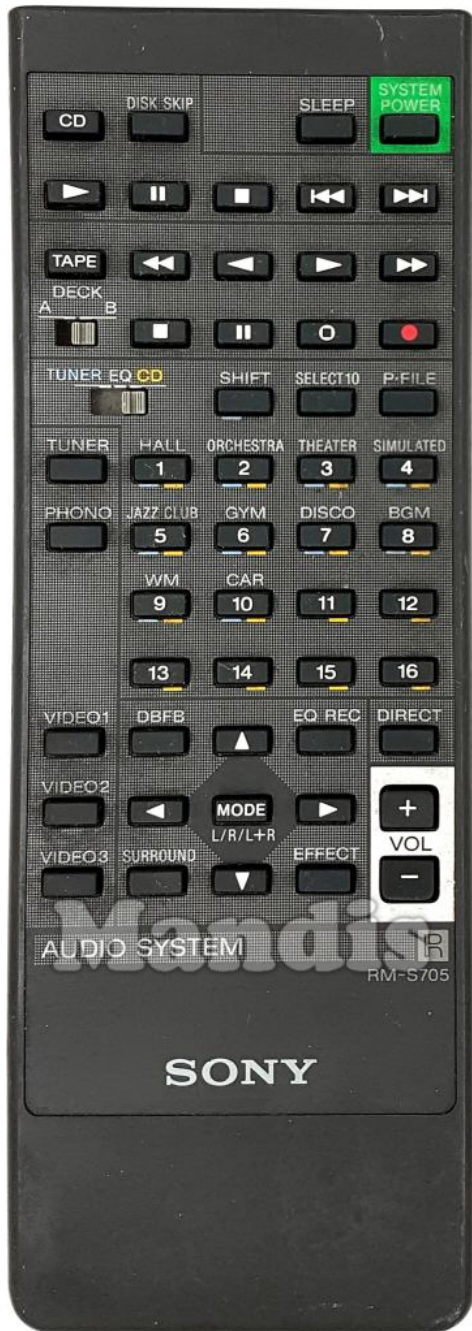 
Originalfernbedienung   Ersatzfernbedienung











 

 
 
 




 



 



 

 
	System Power		Power
	CD		Yellow
	Tape		Green
	Tuner		Blue
	Phono		Red
	Video 1		Smart
	Video 2		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0

Originalfernbedienung   Ersatzfernbedienung




 



 


	Vol+		Vol +
	Vol-		Vol -
	Shift		Menu
	Video 3		Shift + Media




**Originalfernbedienung Ersatzfernbedienung**

	Select 10		Info
	P.File		Ch +
	1/Hall		1
	2/Orchestra		2
	3/Theater		3
	4/Simulated		4
	5/Jazz Club		5
	6/Gym		6
	7/Disco		7
	8/BGM		8
	9/WM		9
	10/Car		0
	Vol+		Vol +
	Vol-		Vol -
	System Power		Power
	CD		Yellow
	Tape		Green

**Originalfernbedienung Ersatzfernbedienung**

	Tuner		Blue
	Phono		Red
	Video 1		Smart
	Video 2		Media
	Video 3		Shift + Media

