







 


 
 
 






| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---|-----------------------|---|
| Power ON/Off |  | Display |  |
| Mute |  | CD F.FWD |  |
| Every Pop |  | Stop |  |
| Tape 1 Preset |  +  Shift + >>I | CD Pause |  |
| Vol Rs-/Effect |  | CD Play |  |
| Tape 2 Pre./eq |  | Volume+ |  |
| Funct./Direct |  | CD Rewind |  |
| Woofers/Speed |  | Next/Prog+ |  |
| Tape 1 Stop |  +  Shift + Stop | Volume- |  |
| Vol Rs+/S.Mode |  | Prev./Prog- |  |
| Preset Pause |  +  Shift + Pause | Pr 1 |  |
| Input/Source |  | Program |  +  Shift + Sleep |
| CD Random |  | Pr 2 |  |
| Repeat |  | Pr 3 |  |
| CD/Theater |  | Tape 2 REC./jazz |  |
| Tape 1 Hall/Ats |  +  Shift + I<< | Pr 4 |  |
| Sleep |  | Pr 5 |  |



Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

| | | | | |
|---------------|----------------------------------|---------------|--|--|
| Pr 6 | 6 | 6 | | |
| Tape 1 Rec | SHIFT + REC MODE | Shift + Rec | | |
| Tape 1 Rew | SHIFT + ◀◀ | Shift + << | | |
| Tape 1 F.FWD | SHIFT + ▶▶ | Shift + >> | | |
| Edit | E-MANUAL D.MENU | D. Menu | | |
| Tape 1 Play | SHIFT + ▶ | Shift + Play | | |
| Pr 7 | 7 | 7 | | |
| Pr 8 | 8 | 8 | | |
| Pr 9 | 9 | 9 | | |
| Mode | -/-- GUIDE | Guide | | |
| Pr 0/10 | 0 | 0 | | |
| Band | AD SUBT | Subt | | |
| Clear | SHIFT + 9 | Shift + 9 | | |
| +10/Next Sv+V | SHIFT + -/-- GUIDE | Shift + Guide | | |
| Fm Mode/Disc | SOUND DUAL | Dual | | |
| Center | OK | Ok | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

