 

 

 
 
 
 
 
 

 
 



 
 
 
 
 

 

 



 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Subtitle		Subt
	Angle/Del		Exit
	Language		Dual
	Return		Back
	Time		Shift + AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0

Originalfernbedienung Ersatzfernbedienung

	+10		Pre Ch
	Mute		Mute
	N/P		Format
	PBC		3D
	OSD		Smart
	Setup		Options
	Title/TTX		Text
	Menu		Menu
	Prog/EPG		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Play		Play
	Stop		Stop
	Pause		Pause





	Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
		<<		<<
		>>		>>
		l<<		l<<
		>>l		>>l
		Tv/Radio		TV/R
		Source		AV
		L/R		Media
		Slow		Sleep
		Rec		Rec
		Step		List
		Vol+		Vol +
		Vol-		Vol -
		Red/Repeat		Red
		Green/A-B		Green
		Yellow/Zoom		Yellow
		Blue/Clear		Blue

