












 










Originalfernbedienung Ersatzfernbedienung























	Sleep		Sleep / Timer
	Optimum		Smart / List
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	*		Sound / Title
	0		0
	SAT		Shift + 0
	Display		Display / Media
	Up / PR+		Up

Originalfernbedienung Ersatzfernbedienung

	Up / PR+		CH+ / Page+
	Menu		Menu / Home
	Left / Vol-		Left
	Left / Vol-		Vol-
	Right / Vol+		Right
	Right / Vol+		Vol+
	Red / AV1		Red / Netflix / Search
	Down / PR-		Down
	Down / PR-		CH- / Page-
	Green / AV2		Green / APP / Repeat
	Blue		Blue / Prime Video / Random
	Yellow		Yellow / YouTube / Repeat
	Mute		Mute / Dimmer
	I/II		Audio / Lang I/II
	<PR		Back / Return
	TV / AV		AV / Input / RDS
	Install		Picture / Format



Originalfernbedienung Ersatzfernbedienung











 























	i		Info / Angle
	Text Hold		TV/Radio /
	Text		Text / Goto
	◊		Guide / EPG / -/--
	Mode		D.Menu / Top
	S...		Subtitle / EQ
	Mix		Shift + Text /
	Text Cancel		Exit / Cancel / Clear
	Text Reveal		Eject / Surround
	Text Size		Zoom / Size
	Status		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

 
 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Display		Display / Media
	*		Sound / Title
	<<		<< / Tune-
	Up / PR+		CH+ / Page+
	Up / PR+		Up
	Down / PR-		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

	Down / PR-		Down
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Eject		Eject / Surround

