


 









 
 
 


 
 
 
 

 
 
 


 





Originalfernbedienung Ersatzfernbedienung

	Function		Power
	Language		Dual
	Screen On/Off		Smart
	Setup		Options
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info/Display		Info
	Stop/USB/Card		Stop
	DVD Menu		D. Menu
	Title		List
	Tv/Radio		TV/R
	TTX		Text
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	OK		Ok
	Play		Play
	Pause		Pause
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG/Program/Angl		Guide
	Zoom/Slow		3D





Originalfernbedienung Ersatzfernbedienung

	<<		<<
	<<		<<
	>>		>>
	>>		>>
	Subtitle		Subt
	Audio	+	Shift + Dual
	Search	+	Shift + TV/R
	FAV/Repeat		Pre Ch

Originalfernbedienung Ersatzfernbedienung

