



 





 



 





























 

 

 

 



 

 



 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Freeze		Pause / Step / Freeze
	0		0

Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	OK / Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Info		Info / Angle
	CH+		CH+ / Page+
	Home		Shift + Menu /
	Vol+		Vol+





Originalfernbedienung Ersatzfernbedienung

	CH-		CH- / Page-
	Mouse		Smart / List
	Vol-		Vol-
	<< / Text		<< / Tune-
	>> / Text		Text / Goto
	>> / Hold	+	Shift + Stop /
	>> / Hold		>> / Tune+
	l<< / Mix		l<< / Preset-
	l<< / Mix	+	Shift + Text /
	>>l / Reveal		>>l / Preset+
	Play/Pause / Index		Play / Slow
	Stop / Size		Stop / Hold
	Stop / Size		Zoom / Size
	FAV		Fav / Marker / PC
	Aspect	+	Shift + Picture / Format
	File		Display / Media
	Delete		Eject / Surround

Originalfernbedienung Ersatzfernbedienung

	Zoom-	+	Shift + Down
	Zoom+	+	Shift + Up
	EPG		Guide / EPG / /--
	DTV / Radio		TV/Radio /
	Rec		Rec / Rec Mode
	Subtitle		Subtitle / EQ

