











 


















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play / [≡]		Play / Slow
	Pause / [T.S]		Pause / Step / Freeze
	Stop / [≡]		Stop / Hold
	Rec / [≡↑]		Rec / Rec Mode
	<< / [≡⊖]		<< / Tune-
	<< / [≡i]		<< / Preset-
	>> / [≡?]		>> / Preset+
	>> / [≡X]		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7










 



 





 



 


Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	Info		Info / Angle
	0		0
	EPG		Guide / EPG / -/-
	Settings ⚙		Setup / OPT /
	Settings ⚙		Display / Media
	Input		AV / Input / RDS
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	≡		D.Menu / Top
	Google Assist		Smart / List
	←		Back / Return
	Vol+		Vol+





Originalfernbedienung Ersatzfernbedienung

	P+		CH+ / Page+
	Vol-		Vol-
	Home ∆		Menu / Home
	P-		CH- / Page-
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	I/II		Audio / Lang I/II
	[≡]		Text / Goto
	Subt		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung

