

 



 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Program		Sleep
	Subtitle/Copy		Subt
	Open/Close		Eject
	Display		Shift + Info
	Step		List
	↔/A-B		3D
	Repeat		Shift + Text
	V-Mode		Format
	N/P		D. Menu
	PBC		Shift + TV/R
	Zoom		Shift + Eject
	Text/Title		Text
	DVD/DVB		AV
	Tv/Radio		TV/R
	Audio		Dual
	Setup		Options

Originalfernbedienung Ersatzfernbedienung

	Return		Back
	Angle		Exit
	USB/Card		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Menu		Menu
	Play		Play
	Pause		Pause
	Stop/PVR		Stop
	EPG		Guide
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	1		1		Green		Green
	2		2		Yellow		Yellow
	3		3		Blue/FAV		Blue
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	10		0				
	10+		Pre Ch				
	Goto		Media				
	<</Rev		<<				
	>>/Fwd		>>				
	I<</Prev		I<<				
	>>I/Next		>>I				
	Red		Red				

