



 










 



 

















Originalfernbedienung Ersatzfernbedienung

	Standby		Shift + Mute / Dimmer
	Mute		Mute / Dimmer
	ATV		Shift + AV / Input / RDS
	TV / Radio		TV/Radio /
	TV Guide		Guide / EPG / -/-
	USB		Shift + 8
	S. Mode		Sound / Title
	USB I<<<		I<<< / Preset-
	USB >>>		>>> / Preset+
	USB Stop		Stop / Hold
	P. Mode		Picture / Format
	USB <<<		<<< / Tune-
	USB >>>		>>> / Tune+
	USB Play/Pause		Shift + Play /
	USB Play/Pause		Play / Slow
	AV Source		AV / Input / RDS
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0







Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	FAV		Fav / Marker / PC
	Vol+		Vol+
	Subtitle		Subtitle / EQ
	Aspect		Shift + Picture / Format
	CH+		CH+ / Page+
	Vol-		Vol-
	Audio		Audio / Lang I/II
	Sleep		Sleep / Timer
	CH-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	Index		Eject / Surround
	Reveal		Shift + Back / Return

Originalfernbedienung Ersatzfernbedienung

	Power Display		Power
	Power Display		Shift + Power
	Size		Zoom / Size
	Hold / 3D		Shift + Stop /
	Hold / 3D		Shift + 3

