



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------------|---|------------------------|
| | PLAY REVERSE | | Left |
| | PLAY TAPE A | | Right |
| | PLAY REVERSE | + | Shift + Left |
| | PLAY TAPE B | + | Shift + Right |
| | << TAPE A | | Down |
| | >> TAPE A | | Up |
| | << TAPE B | + | Shift + Down |
| | >> TAPE B | + | Shift + Up |
| | STOP TAPE A | | OK |
| | REC TAPE B | + | Shift + Rec / Rec Mode |
| | STOP TAPE B | + | Shift + OK |
| | I<< CD | | I<< / Preset- |
| | >>I CD | | >>I / Preset+ |
| | STOP CD | | Stop / Hold |
| | PLAY/PAUSE CD | | Pause / Step / Freeze |
| | PLAY/PAUSE CD | | Play / Slow |
| | TUNER BAND | | Smart / List |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------|--|------------------|
| | P.Call | | Display / Media |
| | CD DISC | | Eject / Surround |
| | TAPE 1 | | 2 |
| | Tuner | | 6 |
| | Phono | | 7 |
| | CD | | 3 |
| | Video 2 | | 4 |
| | Video 1 | | 1 |
| | TAPE 2 | | 5 |
| | POWER | | Power |
| | VOLUME- | | Vol- |
| | VOLUME+ | | Vol+ |

