 


 



 





 



 

 

 

 



 








 

 
 
 













 

 
 

 










Originalfernbedienung Ersatzfernbedienung

	On		Power
	Off		Shift + Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Test		Smart
	Night		Exit
	[≡]		Text
	Sleep		Sleep
	Surr.		Dual
	SPKR/Menu		Menu
	Delay/Normal		Info
	CH./[≡?]		TV/R
	Digital/[≡X]		Media
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tun-M/[≡+]		Guide
	Mem/[≡◇]		Pre Ch
	Tuning ▲		Ch +
	Tuning ▼		Ch -
	Direct/Green		Green
	Clear/Yellow		Yellow

 

 
 




Originalfernbedienung Ersatzfernbedienung

	Preset ▲		Shift + Ch +
	Preset ▼		Shift + Ch -
	OSD		Back
	RDS/D.Skip		Options
	Set		Ok
	Red		Red
	Blue		Blue
	DVD		Shift + 2
	AVR		Shift + 1
	CD		Shift + 3
	Tape		Shift + 4
	VID1/VCR		Shift + 5
	VID2/TV		Shift + 6
	VID3/CBL/SAT		Shift + 7
	VID4		Shift + 8
	AM/FM		Shift + 9
	6/8 CH		Shift + Guide







 








Originalfernbedienung Ersatzfernbedienung

	> DVD		Play
	Logic 7		Shift + Pre Ch
	Stereo		Shift + Blue
	DTS Neo 6		Shift + Yellow
	DTS Surr.		Shift + Green
	Dolby		Shift + Red
	<< DVD		<<
	>> DVD		>>
	Stop DVD		Stop
	Pause DVD		Pause
	I<</Skip Down		I<<
	Skip Up/>>I		>>I





Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Night		Exit
	[≡]		Text
	Vol+		Vol +
	Vol-		Vol -
	SPKR/Menu		Menu
	CH./[≡?]		TV/R
	Digital/[≡X]		Media
	Delay/Normal		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Set		Ok
	1		1
	2		2




 


Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tun-M/[≡+]		Guide
	Mem/[≡◇]		Pre Ch
	Direct		Smart
	Clear		Shift + Exit
	Preset ▲		Ch +
	Preset ▼		Ch -
	RDS/D.Skip		Options
	>>		>>
	<<		<<





Originalfernbedienung Ersatzfernbedienung








 
 





 

 










 






	Play		Play
	Stop		Stop
	Pause		Pause
	>>		>>
	<<		<<

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	SPKR/Menu		Menu
	Delay/Normal		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tun-M/[≡+]		Guide
	Mem/[≡◆]		Pre Ch
	Direct		Smart

Originalfernbedienung Ersatzfernbedienung

	Preset ▲/Blue		Ch +
	RDS/D.Skip		Options
	>>		>>
	<<		<<
	Play		Play
	Stop		Stop
	Pause		Pause
	>>		>>
	<<		<<
	Power (On /Off)		Media
	PR+ VCR		Shift + Ch +
	PR- VCR		Ch -
	Vol+ VCR		Vol +
	Vol- VCR		Vol -
	1 VCR		Shift + 1
	2 VCR		Shift + 2
	3 VCR		Shift + 3





Originalfernbedienung Ersatzfernbedienung

	4 VCR	 + 	Shift + 4
	5 VCR	 + 	Shift + 5
	6 VCR	 + 	Shift + 6
	7 VCR	 + 	Shift + 7
	8 VCR	 + 	Shift + 8
	9 VCR	 + 	Shift + 9
	0 VCR	 + 	Shift + 0
	Clear VCR		Exit
	Play VCR		Red
	Stop VCR		Green
	Rec VCR		Rec
	>> VCR		Blue
	<< VCR		Yellow

Originalfernbedienung Ersatzfernbedienung



