























 

 



 

 





Originalfernbedienung Ersatzfernbedienung

	System Power		Power
	Standby		Shift + Power
	Sleep		Sleep / Timer
	6CH INPUT		Shift + Fav / Marker / PC
	PHONO		Shift + Guide / EPG / -/-
	TUNER		Shift + 6
	CD		Shift + 3
	V-AUX		Shift + 7
	CBL / SAT		Shift + 0
	MD / TAPE		Shift + 5
	CD-R		Shift + 9
	D-TV / LD		Shift + 1
	VCR 1		Shift + 4
	VCR2 / DVR		Shift + 8
	DVD		Shift + 2
	Vol+		Vol+
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Level		Smart / List
	Up		Up
	Set Menu		Menu / Home
	A/B/C/D/E		Info / Angle
	Mute		Mute / Dimmer
	Preset-		I<< / Preset-
	Left		Left
	Select		OK
	Preset+		>>I / Preset+
	Right		Right
	Test		Text / Goto
	Down		Down
	On Screen /		Display / Media
	Stereo Effect		Audio / Lang I/II
	Hall / 1		1
	Church / 2		2
	Jazz Club / 3		3



